 




WF-058/060

Wall Feed Thru for FLEXWELL® Elliptical Waveguide E58 and E60



The kit consists of wall gland, a single rubber boot and tension clamp with two bolts.

Features / Benefits

Elliptical Waveguide installation

- The wall gland provides a single entry in conjunction with a feed through plate
- It consists of a single rubber boot, wall gland and stainless steel clamp

Technical Features

STRUCTURE

Product Type	Wall/Roof Feed-Through System
--------------	-------------------------------

MECHANICAL SPECIFICATIONS

Feed-Through Holes	1
Feed-Through Hole Diameter	70mm (2.76in)

PACKAGING INFORMATION

Package Quantity	1
------------------	---

External Document Links

Notes

Related Documents



Installation Instruction
Installation Instructions